

IRIVER

IRIVER

STRAY KIDS
BLUETOOTH
SPEAKER
IBS-SKZ

아이리버 고객센터 1577-5557 / www.iriver.co.kr
서울시 서초구 방배로18길 5 [방배동 아이리버 하우스]

© IRIVER ALL RIGHTS RESERVED.

INSTRUCTION BOOK

CONTENTS

- 02** Precautions before use
 - Precautions for safety
- 03** Components
- 04** Name and function of each part
- 05** Connect
 - Charge
- 06** Basic usage
 - Power on/off
 - Connect via Bluetooth (pairing)
 - volume control
 - LED indication
- 07** problem solving
- 08** Product specifications
- 09** Apply for A/S
 - Product inquiry and customer service call
 - How to apply for delivery A/S
- 10** Quality Warranty
 - Free service information
 - Paid service information

Precautions before use

Precautions for safety

- Use a USB adapter with a 5V 2A specification when charging. Please be aware that using an uncertified USB adapter or a fast (high-speed) mobile device USB adapter such as 7V/9V/12V that exceeds 5V 2A may cause problems (circuit damage) to the product.
- Please be sure to use a standard power cable.
- Store in a way that prevents impact, submersion, heating, breakage, bending, or compression.
- Ensure that metal, liquids, etc. do not come into contact with the connection terminals.
- Discontinue use if foreign objects enter the product or if it is damaged or deformed due to accidents such as dropping. There is a risk of fire or electric shock.

Please plug in the power cable properly so that it does not shake, and do not bend, twist, or cut the cable.

- Please avoid hot places such as open flames and stoves, as well as flammable materials. There is a risk of deformation, malfunction, or fire.

Please avoid storing and using the product, especially in places where the internal temperature can rise significantly, or in saunas and bathhouses with high humidity and temperature. This may cause electric shock or malfunction.


- Store and use only within the operating temperature range (15~35°C).
- Do not disassemble or modify the product.
- If the product develops an unusual odor, generates heat, discoloration, or deformation during use or storage, discontinue use immediately.
It causes leakage, fever, ignition, and rupture.
- Stop using the product immediately if it becomes submerged. Do not leave the product unattended for a long time after submersion, nor attempt to resolve the issue using methods such as a hair dryer or microwave; please contact customer service as soon as possible.
- Free repairs are not available for malfunctions caused by water damage, and repairs may not be possible.
- In case of product malfunction, please entrust inspection and repair only to professional technicians.

Components


Components are subject to change without prior notice to improve product performance or quality.




product body

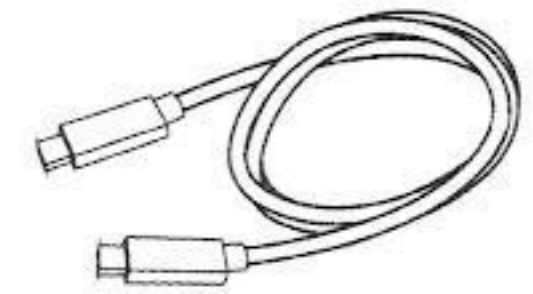

USB Type-C cable

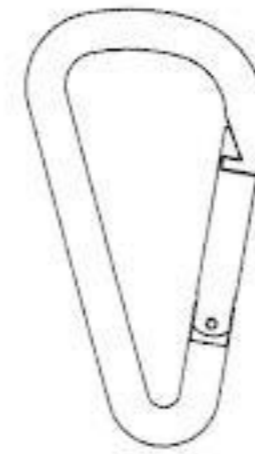

carabiner (hook)

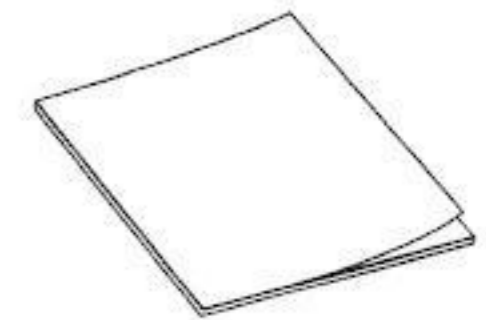

User manual




Wolf Chan



Leebit




TWICE

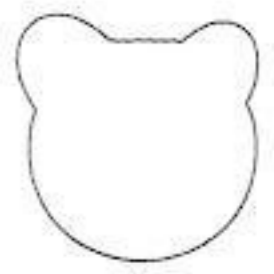


Jiniret




HAN QUOKA

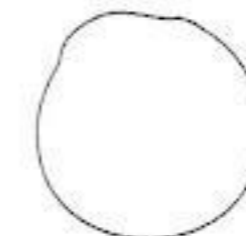

To Bbok

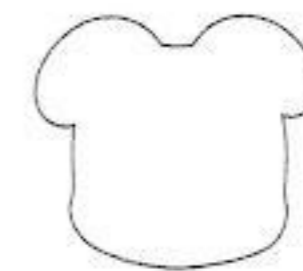

PuppyM

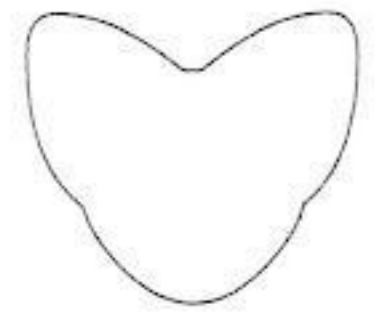


Foxi

silicone case

- If any components are damaged, defective, or missing, please contact the place of purchase.
- Actual components may differ from the picture, and some items may be subject to change.
- One silicone case of the type of product purchased is included.

Name and function of each part

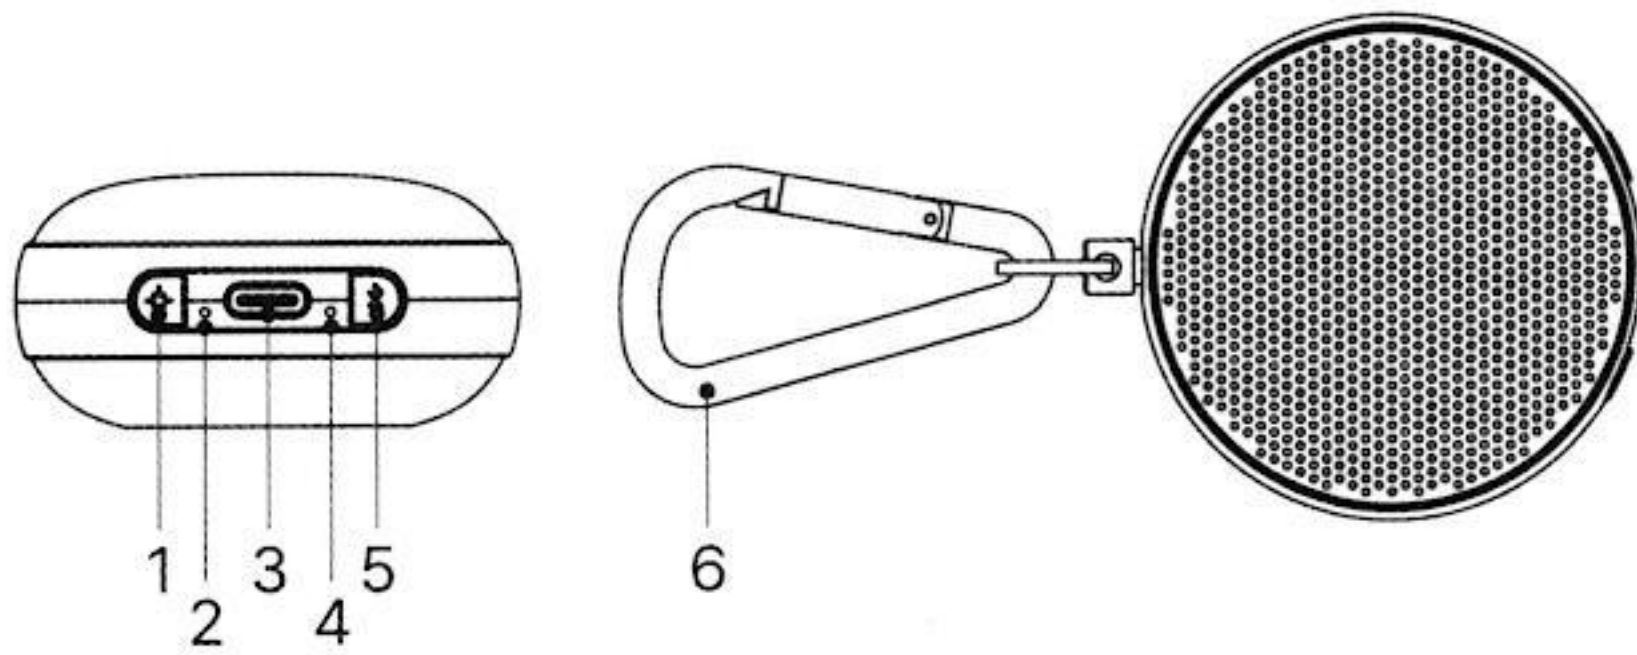

1 Power ON/OFF, Volume- button (★)

2 Charging indicator light (white)

3 USB Type-C charging ports

4 Bluetooth indicator light (blue)

5 Bluetooth, Volume+ button(*)

6 carabiner (hook)

Connect

Charge

1. Charging begins when you connect it to an outlet using a USB Type-C cable and adapter.

- Please use a USB adapter with a 5V 2A specification when charging. Please be aware that using an uncertified USB adapter or a fast (high-speed) mobile device USB adapter such as 7V/9V/12V that exceeds 5V 2A may cause problems (circuit damage) to the product.
- Charging may not work or may be delayed when connected to a low-power USB port (such as some keyboards or USB hubs without their own power supply).
- If you are using it for the first time after purchase or if it has been left unused for a long time, please fully charge the battery before use.
- If the battery is discharged, please charge it for at least 10 minutes before use.

If the battery is discharged due to prolonged non-use, it may affect battery performance. Therefore, please check the battery charge status frequently and be sure to charge the battery if the remaining charge is low.

Basic usage

Power on/off

1. You can turn the power on and off by pressing and holding the [★] button at the bottom of the product for about 3 seconds.

Connect via Bluetooth (pairing)

1. Press and hold the [*] button for about 3 seconds to turn on the power.
2. The Bluetooth indicator light blinks rapidly and enters the pairing waiting state.
3. Search for and select [IBS-SKZ] on your smartphone or other external Bluetooth device.
4. Once the connection is complete, a connection completion sound will play from the speaker.

- Press and hold the [*] button while connected to disconnect.

- **To save battery, the speaker automatically turns off after 15 minutes or more without Bluetooth connected.**

volume control

1. Press the [★] button briefly during playback to decrease the volume.
2. Press the [*] button briefly during playback to increase the volume.

Pressing and holding each button while connected or playing will turn off the power or disconnect the connection, so please press the buttons briefly to adjust the volume.

- Playback-related operations other than volume control are not supported.

LED indication

charging indicator

Charging	Charging indicator lights up
-----------------	------------------------------

Charging complete	Charging indicator goes off.
-------------------	------------------------------

bluetooth indicator light

Waiting for connection (pairing)	Bluetooth indicator blinks quickly
----------------------------------	-------------------------------------------

Connection (pairing) complete	Bluetooth indicator lights up
-------------------------------	-------------------------------

Play music while connected	Bluetooth indicator blinks slowly
----------------------------	------------------------------------------

problem solving

If a problem occurs while using the product, do not disassemble or repair it yourself; please check the following information.

The product does not turn on.

- Check if the product is charged and charge it by connecting a 5V 2A charger.

No sound is output.

- **Please check if the battery is fully charged.**
- Please check if the volume is set to the minimum.
- Please check if the Bluetooth device is turned on, connected properly, and functioning normally.
- **If the connection drops in Bluetooth mode, move the speaker closer to the Bluetooth device.**
- To ensure optimal performance of this device in Bluetooth mode, please adjust the device volume to an appropriate level.
- If the Bluetooth connection fails, please turn the Bluetooth device off and on again, then try reconnecting with the Bluetooth device.

everyone	<p>Input: 5V, 0.5A</p> <p>Charging time: Approx. 2 hours</p> <p>Playback time: Approx. 6 hours (Volume 50%)</p> <p>Battery: 3.7V 400mAh</p>
bluetooth	<p>Version: ver6</p> <p>Supported Profiles: A2DP, AVRCP</p> <p>Operating distance: Max 10m</p> <p>(May vary depending on usage environment)</p>
certification	<p>KC : R-R-Ytc-IBS-SKZ</p> <p>KC Battery : YU101781-24001</p>
size	<p>Approx. 56.4 x 28 mm</p>
weight	<p>About 50g</p>
Components	<p>Main unit, silicone case, USB Type-C cable, carabiner (hook), user manual</p>

Apply for A/S

Product inquiry and customer service call

1577-5557

If you provide detailed information regarding the product, model name, symptoms, etc., you can receive friendly and prompt consultation service.

How to apply for delivery A/S

- For your convenience, please use our designated courier service when requesting after-sales service.
- For free repairs within the warranty period, the shipping fee when using the designated courier is

It is our burden.

Please be careful not to damage the product when packaging, and the packaging is single-use.

Please use the material.

- For accurate and prompt after-sales service, please provide your name, phone number, address, product symptoms, and enclosed items.

Please write a note on the back and send it together.

- Please refer to the website (www.iriver.co.kr) for after-sales service regulations and details.

1. This product has been manufactured through strict quality control and inspection processes.
2. We will repair any malfunctions that occur within the warranty period under normal consumer usage conditions free of charge.
Even within the warranty period, service fees will be charged if the repair falls under the paid repair guidelines in the warranty certificate.
3. The warranty is valid only within the Republic of Korea.
4. Please be sure to present the warranty or purchase receipt when requesting repairs.
5. The warranty period is as follows.

Free service information

If a defect occurs under normal usage conditions within the warranty period from the date of purchase, we will repair it free of charge.

Paid service information

Repairs are subject to a fee if the warranty period has expired or if any of the following cases apply even within the warranty period.

- Failure caused by natural disasters (fire, lightning, floods, etc.)
- Failure caused by user negligence (dropping, water damage, impact damage, excessive force)
- Failure caused by abnormalities in the power supply or defects in connected devices
- Unauthorized modification of the product or repairs received at a non-official service center

entity	1 year	
accessories	2 months	Silicone case, USB Type-C cable, carabiner (hook)
		Non-warranty user manual

MEMO